

MSD IGNITION INSTALLATION INSTRUCTIONS

RPM MODULE SELECTOR SWITCH

| | |
|---------|---------------------|
| PN 8670 | 3,000 - 5,200 RPM |
| PN 8671 | 4,600 - 6,800 RPM |
| PN 8672 | 6,000 - 8,200 RPM |
| PN 8673 | 7,600 - 9,200 RPM |
| PN 8674 | 9,000 - 11,200 RPM |
| PN 8675 | 10,600 - 12,800 RPM |

Parts Included:

- 1 - RPM Module Selector Switch
- 4 - Mounting Screws

Mount the Switch close to the MSD Ignition in a position so it is accessible and easy to read. **The wires of the Switch cannot be lengthened.** Use the supplied mounting screws or the adhesive on the back panel of the unit to mount the Switch.

The 2-pin connector of the Switch plugs into the rpm module receptacle of the MSD component. There is no polarity so its position does not make a difference.

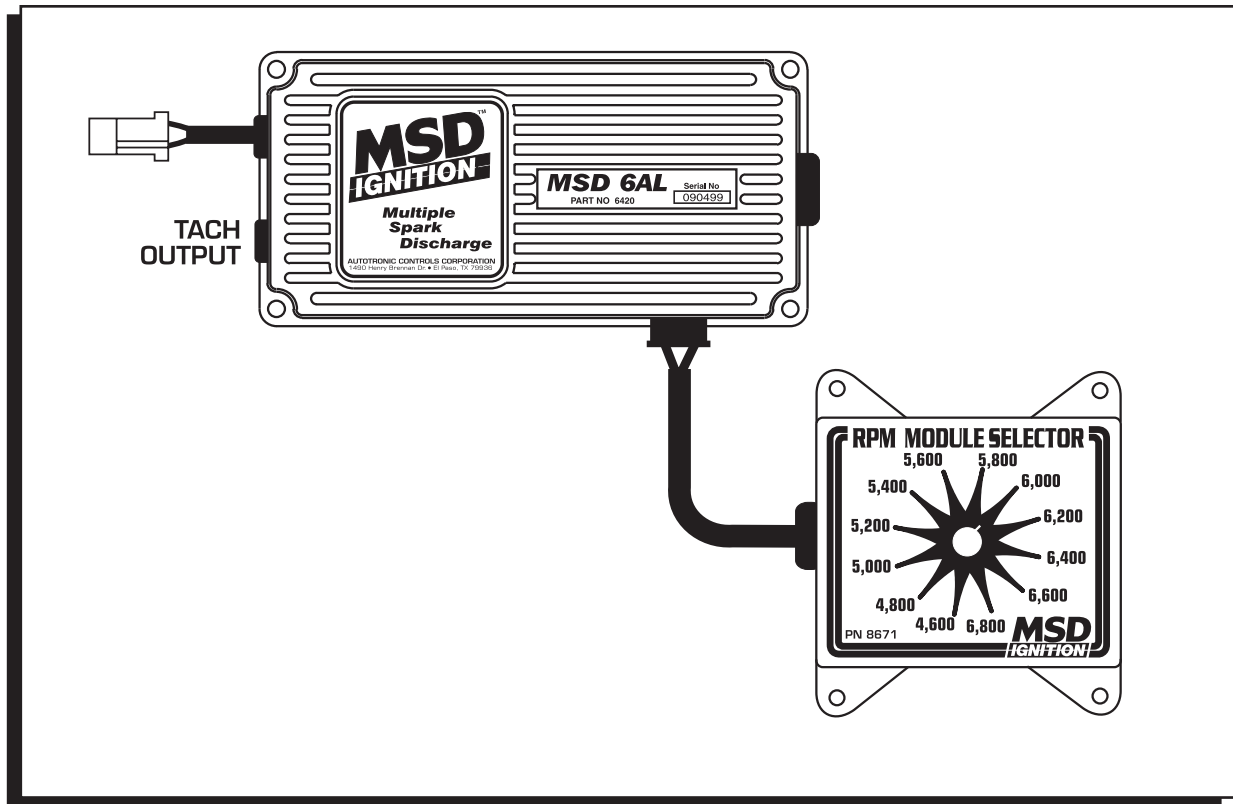


Figure 1 RPM Module Selector Installation.

